



Husqvarna
MOTORCYCLES

701


FITTING INSTRUCTIONS

1. PEEL OFF BACK PAPER



Peel off the back paper from the top part of the sticker, approximately 5 centimeters, and then fold it over.

2. SET THE POSITION

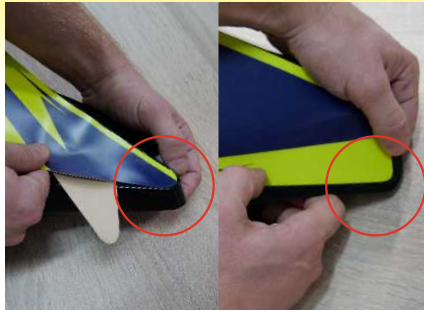

Apply the sticker in the corners at the front and at the back of the side panel.

3. STICK THE GRAPHIC



Slowly apply the sticker all over the top so that it is stuck all the way from front to back.

4. PEEL OFF BACK PAPER



Peel off the back paper. Approximately 15 centimeters and fold it over.

5. PRESS THE STICKER



Apply pressure to the sticker using your finger, focusing on the curved area as you move from the top to the bottom, ending at the cut section.

6. HEAT UP THE STICKER



Use the hair dryer to heat the sticker on the front part of the side plate.

7. PRESS THE STICKER



Apply pressure to the sticker with your finger, making sure to press down along each line and all the way to the edge of the plastic. Utilize a hair dryer frequently to warm up the stickers.

8. PEEL OFF BACK PAPER



Remove the backing paper in stages depending on where you are up to with the sticker application.

9. FOLD OVER THE EDGE



Gradually fold the sticker along the edge and apply gentle pressure with your finger, ensuring it is applied evenly and smoothly in an outward direction.

10. HEAT UP THE STICKER



Apply heat to the adhesive at the base of the sticker using a hair dryer.

11. PRESS THE STICKER



Apply pressure with your fingers to the sticker until it reaches the end of the side panels. Eliminate any air bubbles by using a hair dryer and evenly pressing them out.

12. LET THE ADHESIVE BOND



To ensure optimal adhesion, allow the plastic to sit at room temperature for a full 24-hour period. The following day, carefully inspect the edges and gently apply pressure to any areas where the sticker may have become detached.



GRAPHICS
PLASTICS
SEAT COVERS

Ludovíta Stárka 16
911 05 Trenčín
Slovakia

+421 32 6423 395
info@scrubdesignz.com
www.scrubdesignz.com